



MONTAGEANLEITUNG



Bett

TYP 2701 / 2702 / 2711 / 2712 / 2721 / 2722
2731 / 2732 / 2741 / 2442 / 2751 / 2752

Bed
Lit
Bed



MONTAGEANLEITUNG · ASSEMBLY INSTRUCTION · NOTICE DE MONTAGE · MONTAGEHANDLEIDING

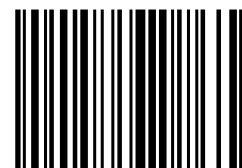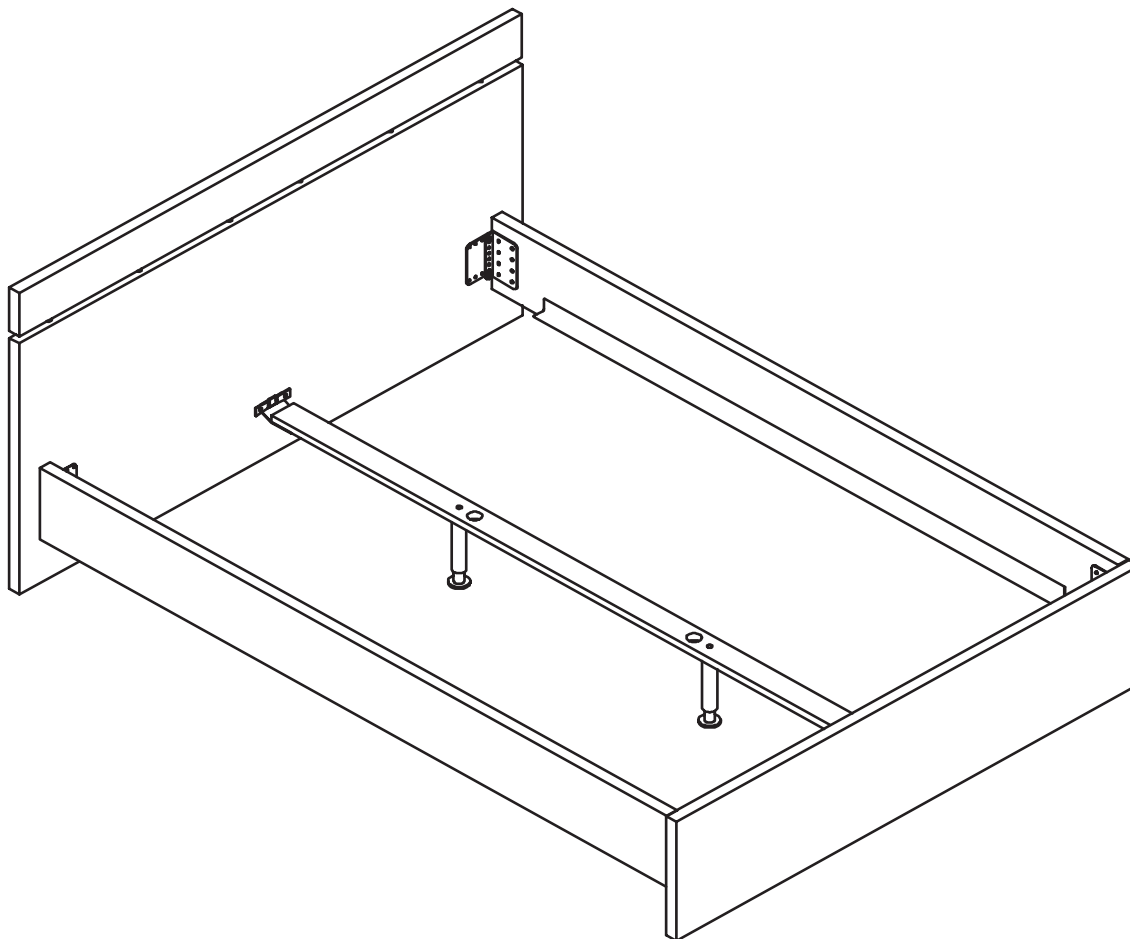

1221349

Lesen Sie zuerst die Anleitung und beginnen Sie dann mit der Montage

Before starting with the fitting, please read carefully the assembly instruction

Avant de commencer avec le montage, nous vous prions de bien lire le notice de montage

Voordat uw met de montage begint, a.u.b. de montagehandleiding lezen

MONTAGEANLEITUNG

Bett

TYP 2701 / 2702 / 2711 / 2712 / 2721 / 2722
2731 / 2732 / 2741 / 2442 / 2751 / 2752

Bed
Lit
Bed



GESAMTÜBERSICHT · SUMMARY · VUE GENERALE · TOTAALOVERZICHT

2x Beschlagbeutel 800

Mat.-Nr.: 1000735

2x Accessories bag 800

2x Sachets de ferrures 800

2x Zakjes met beslagdelen 800



A 16X

2x Beschlagbeutel now! 1064

Mat.-Nr.: 119704

2x Accessories bag now! 1064

2x Sachets de ferrures now! 1064

2x Zakjes met beslagdelen now! 1064



B 3X/4X

Beschlagbeutel 1131

Mat.-Nr.: 1035977


Accessories bag 1131

Sachets de ferrures 1131

Zakjes met beslagdelen 1131



C 2X



D 2X
4x20


Beschlagbeutel 1562

Mat.-Nr.: 1185850


Accessories bag 1562

Sachets de ferrures 1562

Zakjes met beslagdelen 1562



E 6X





F 24X
4x25

Für die Montage wird benötigt:

Necessary for assembly:

Pour le montage il faut:

Benodigdheden voor de montage:

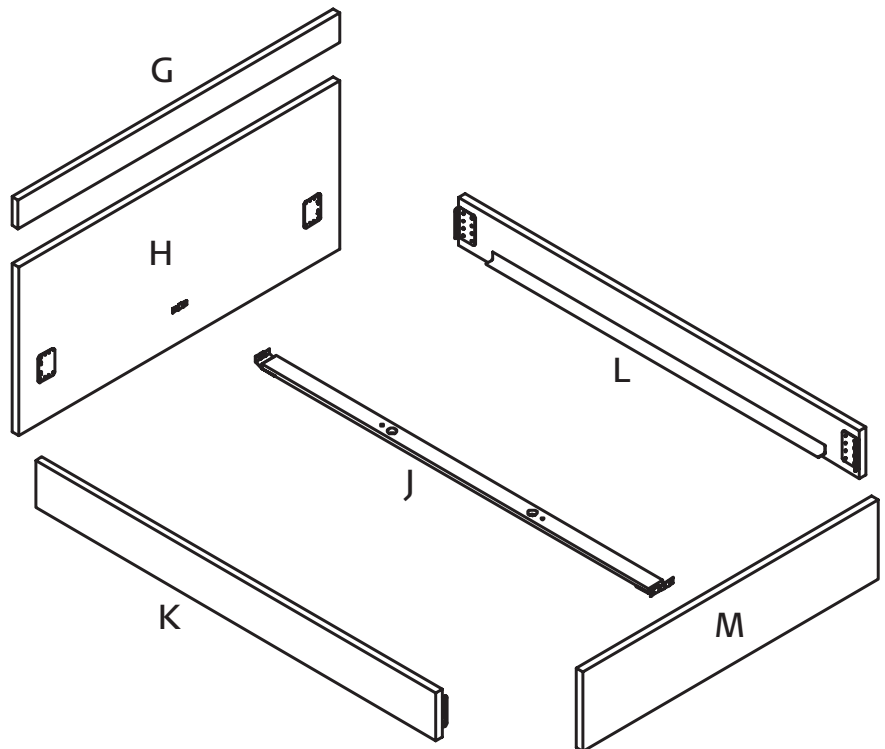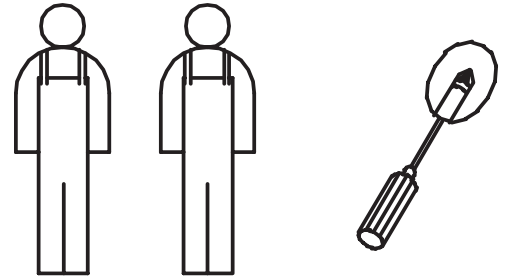

Verehrter Kunde, hier haben Sie die Möglichkeit die mitgelieferten Schrauben nachzumessen!

Dear customer, here you find a possibility to measure the delivered screws!

Cher client, ici vous avez la possibilité de mesurer les vis livrées!

Beste klant, hier heeft uw de mogelijkheid de schroeven te meten!



MONTAGEANLEITUNG

Bett

TYP 2701 / 2702 / 2711 / 2712 / 2721 / 2722
2731 / 2732 / 2741 / 2442 / 2751 / 2752


Bed
Lit
Bed

now! no.10
by hülsta


MONTAGE · ASSEMBLY · MONTAGE · MONTAGE

1


140 cm Breite
140 cm width
140 cm de largeur
140 cm breedte

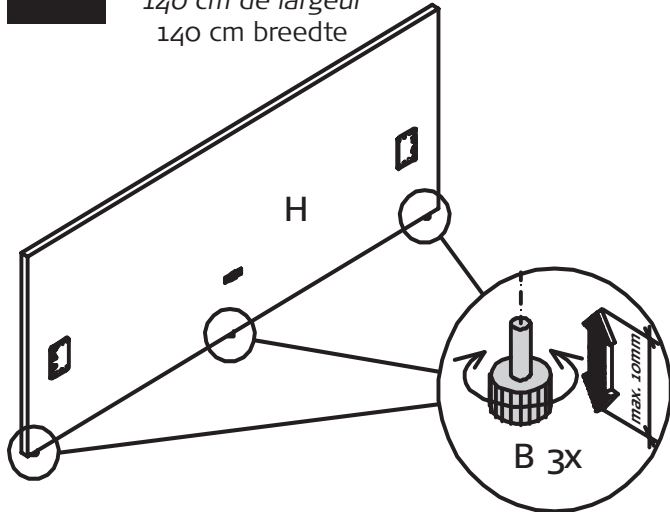

160 & 180 cm Breite
160 & 180 cm width
160 & 180 cm de largeur
160 & 180 cm breedte

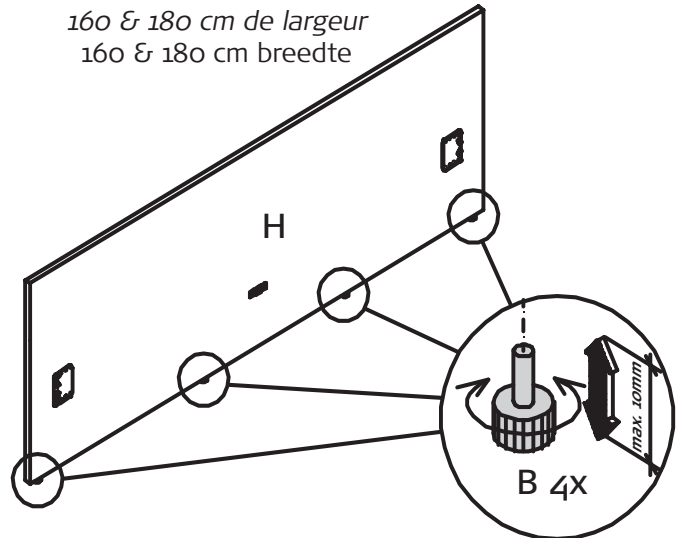

2

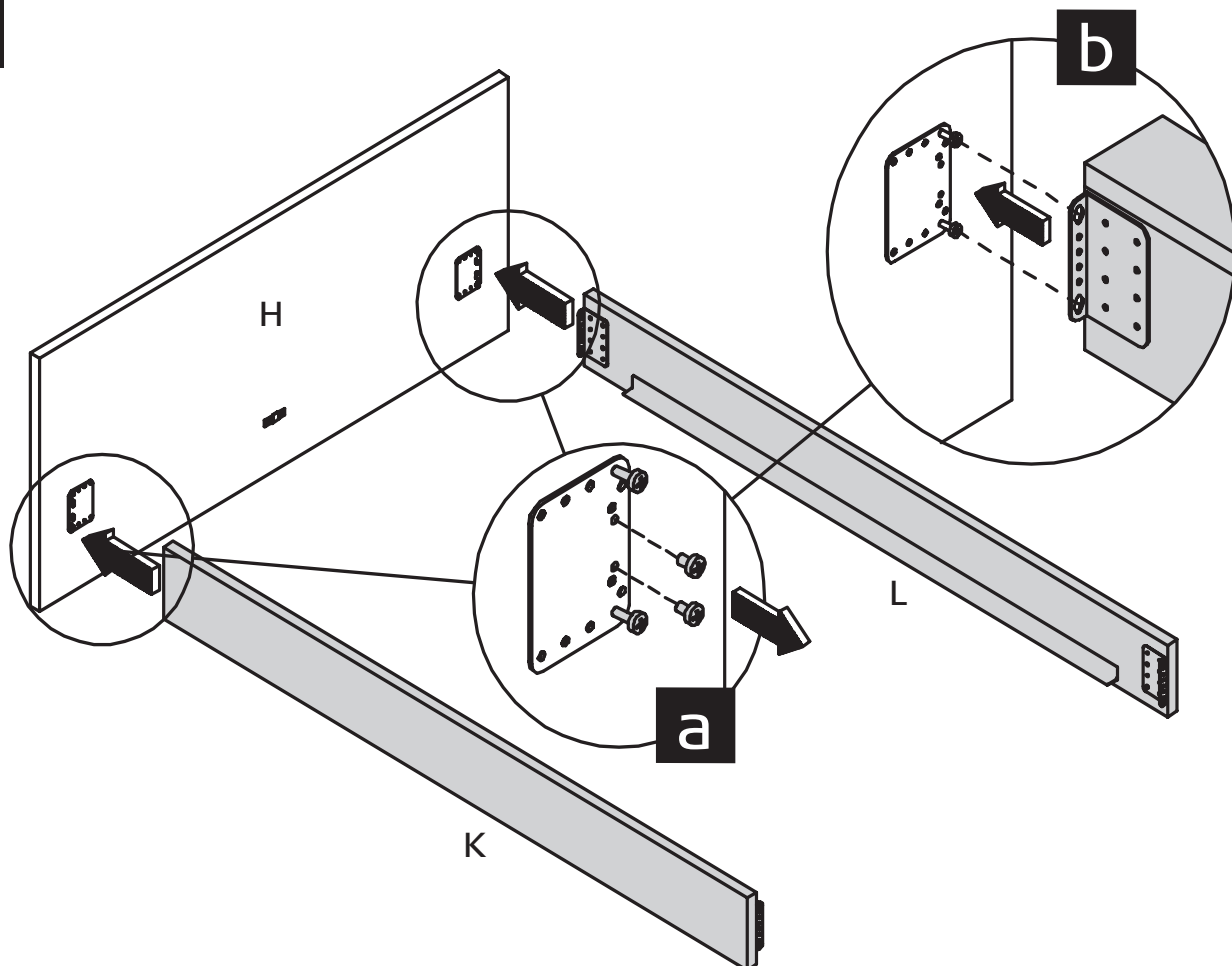

MONTAGEANLEITUNG

Bett

TYP 2701 / 2702 / 2711 / 2712 / 2721 / 2722


2731 / 2732 / 2741 / 2442 / 2751 / 2752

Bed
Lit
Bed





MONTAGE · ASSEMBLY · MONTAGE · MONTAGE

3

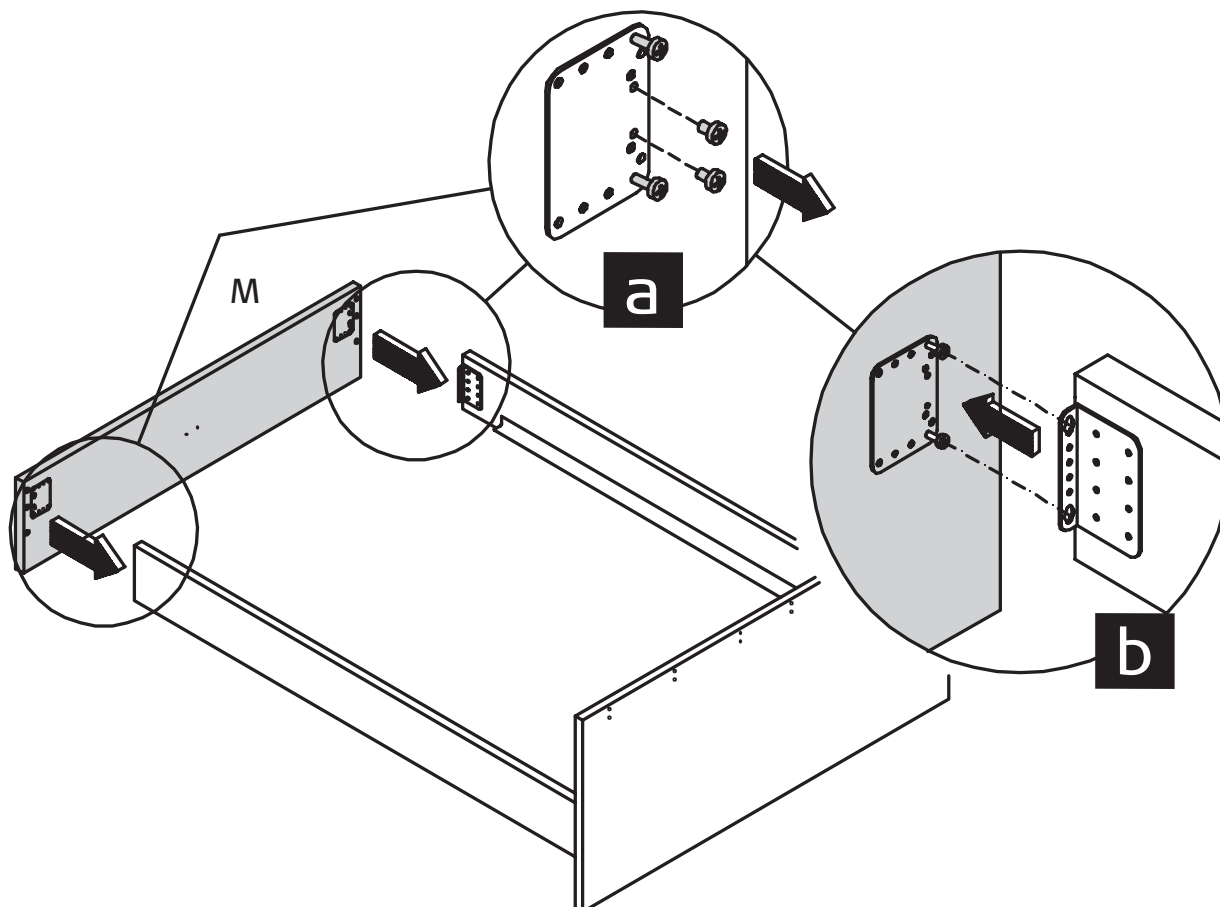

4

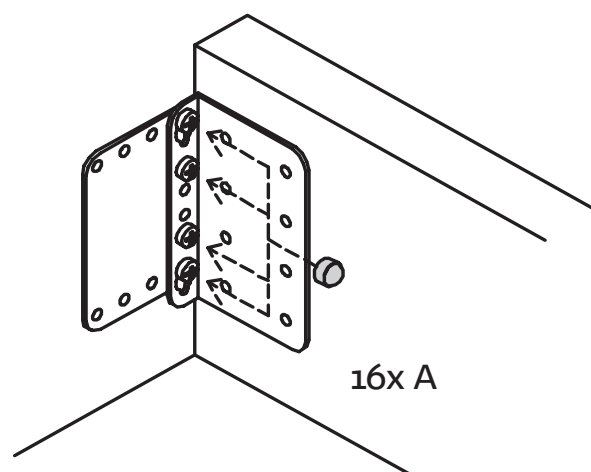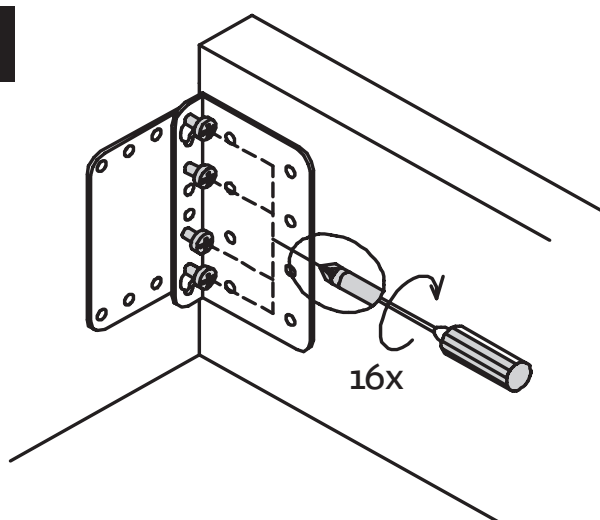

MONTAGEANLEITUNG

Bett


TYP 2701 / 2702 / 2711 / 2712 / 2721 / 2722
2731 / 2732 / 2741 / 2442 / 2751 / 2752

Bed
Lit
Bed




MONTAGE · ASSEMBLY · MONTAGE · MONTAGE

5

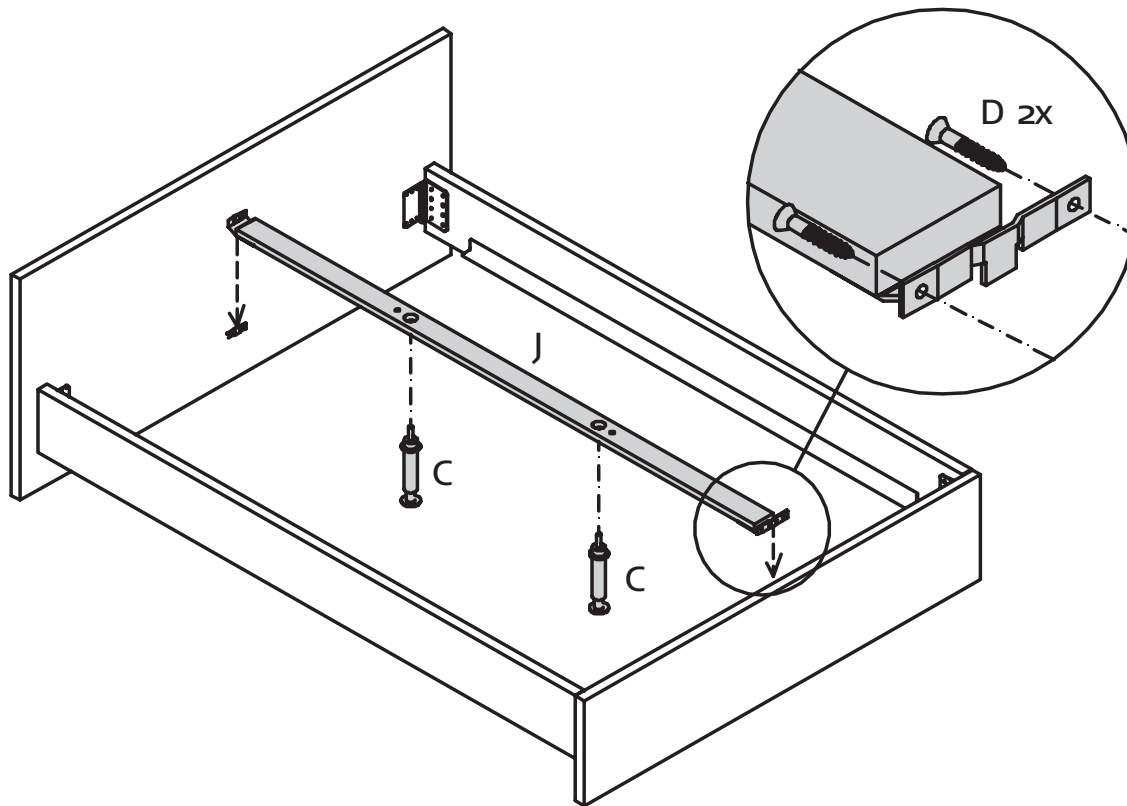

6

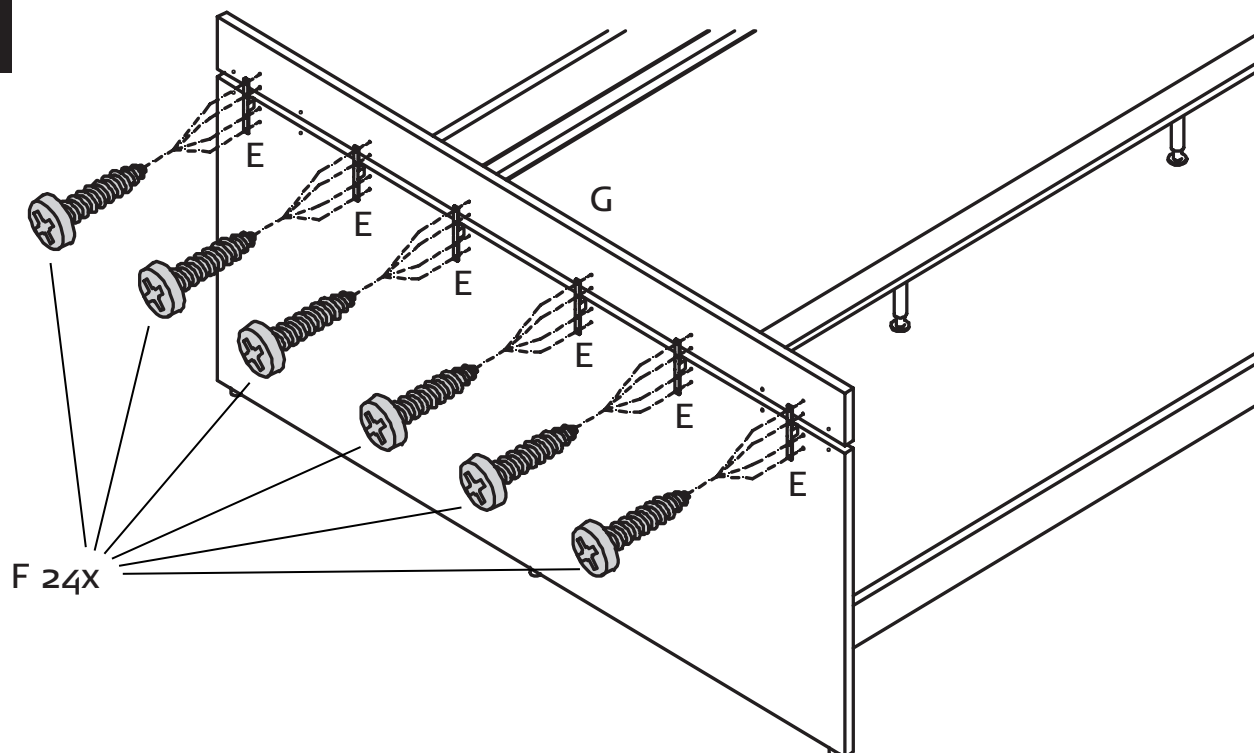

SERVICE

Stand: 03.2008

hülsta-werke · Karl-Hülst-Straße 1 · 48703 Stadtlohn
TEL.+49 2563 86-0 · FAX +49 2563 86-1417
www.huelsta.com · info@huelsta.com

Mat.Nr.1221349

SEITE 5