
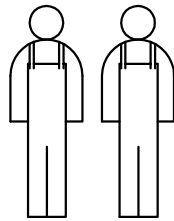




1766109

Für die Montage wird benötigt:




BB 2797	Mat. 1766110	
6x		M8x16
8x		M6x30


1

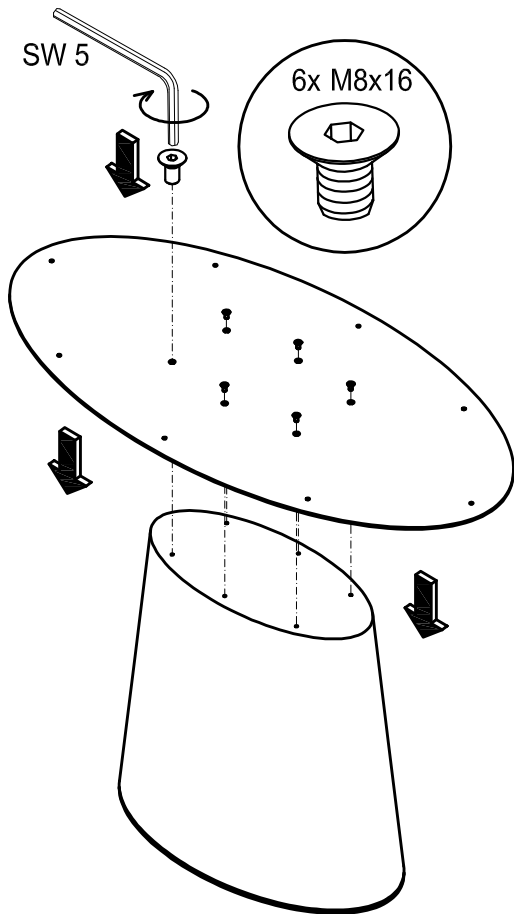

2

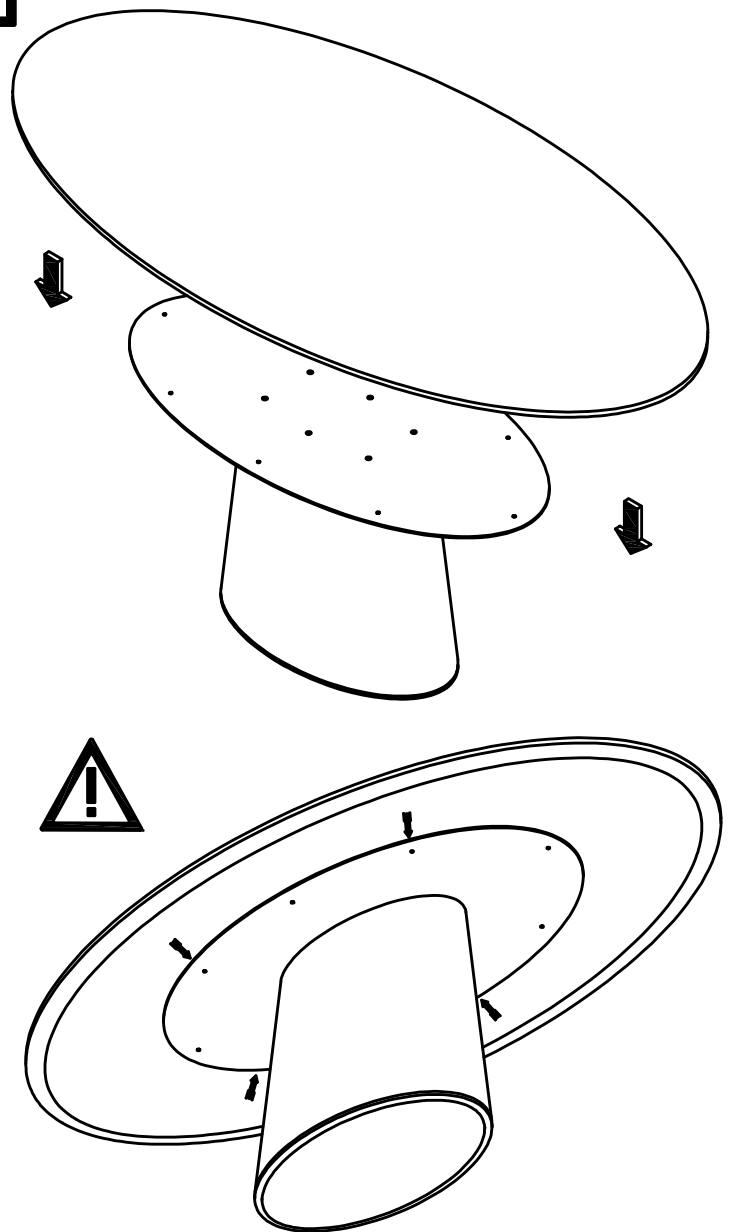

3

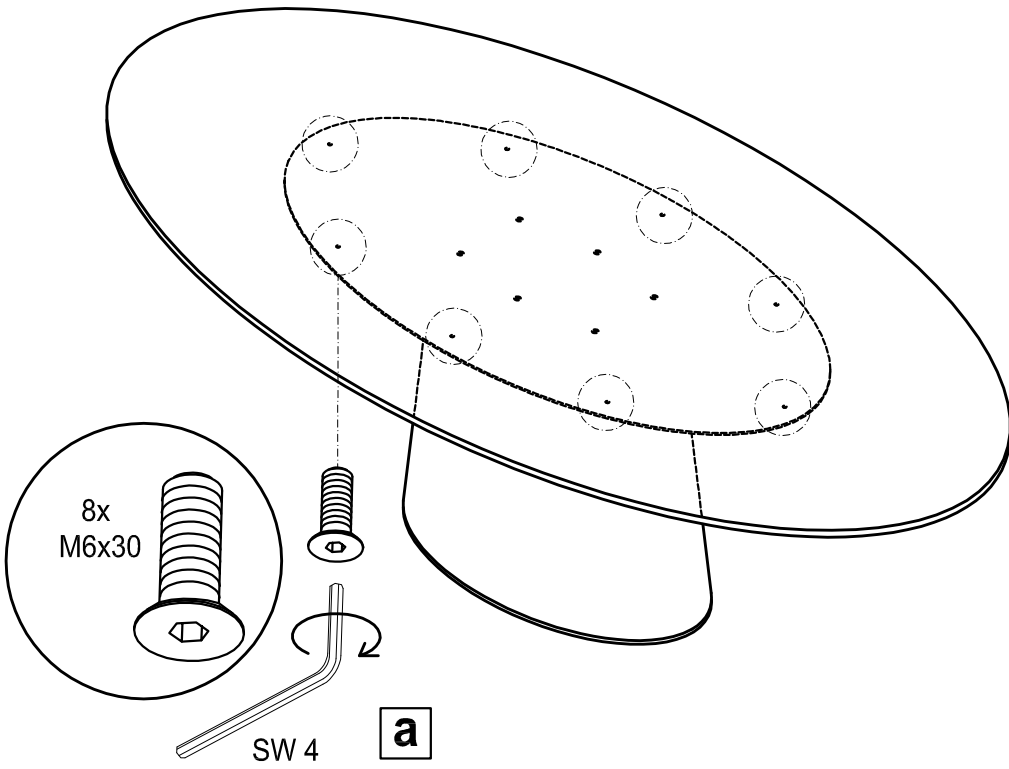

b

